



**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

**Originalfernbedienung    Ersatzfernbedienung**

	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	I<<		I<< / Preset-
	CH+		CH+ / Page+
	Up		Up
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Vol-		Vol-
	Left		Left
	OK		OK
	Vol+		Vol+
	Right		Right
	EPG		Guide / EPG / -/-
	Menu		Menu / Home
	Down		Down
	CH-		CH- / Page-
	>>I		>>I / Preset+





**Originalfernbedienung    Ersatzfernbedienung**

EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
TEXT	Text	GOTO TEXT	Text / Goto
AUTO	Auto	LIST SMART	Smart / List
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
LAN/AUDIO	LAN/Audio	LANG I/II AUDIO	Audio / Lang I/II
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /
◀◀	<<	TUNE- ◀◀	<< / Tune-
▶▶	>>	TUNE+ ▶▶	>> / Tune+
▶	Play	SLOW ▶	Play / Slow
▶	Pause	STEP-FREEZE 	Pause / Step / Freeze
■	Stop	HOLD ■	Stop / Hold

**Originalfernbedienung    Ersatzfernbedienung**


