


 




 



 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer
	0		0
	Info		Info / Angle
	PLUGIH		Setup / OPT /
	EPG		Guide / EPG / -/-
	Fav		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	<		I<< / Preset-
	Up		Up
	>		>>I / Preset+
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Back		Back / Return
	CH+		CH+ / Page+
	Vol-		Vol-
	TV		AV / Input / RDS
	CH-		CH- / Page-
	Radio		TV/Radio /
	Radio		Shift + 6





Originalfernbedienung

Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	FWD		>> / Tune+
	REV		<< / Tune-
	TV	 +  Shift + 1	
	Audio		Audio / Lang I/II
	Help		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Cyan		Blue / Prime Video / Random
	Text		Text / Goto
	Timer	 +  Shift + Sleep / Timer	
	PIP		Picture / Format
	Media		Display / Media

Originalfernbedienung

Ersatzfernbedienung

