



**Originalfernbedienung Ersatzfernbedienung**

	Standby/On		Power
	Smart Picture		Picture / Format
	Eject		Eject / Surround
	Child Lock		Zoom / Size
	Monitor		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Turbo Timer		Smart / List
	0		0
	Timer		Sleep / Timer

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu / Home
	Up / P+		CH+ / Page+
	Up / P+		Up
	OK		OK
	Left		Left
	Right		Right
	Vol+		Vol+
	Down / P-		Down
	Down / P-		CH- / Page-
	TV+		Shift + CH+ /
	Clear		Exit / Cancel / Clear
	Select		Fav / Marker / PC
	Vol-		Vol-
	TV Power		Shift + Power
	TV-		Shift + CH- /
	Play		Play / Slow
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	>>		>> / Tune+
	>I / Index		Info / Angle
	Record/OTR		Rec / Rec Mode
	>I< / Still		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung


