



**Originalfernbedienung Ersatzfernbedienung**

	Power TV	 + 	Shift + Power
	Power PC		Power
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	Start (Windows)		Smart / List
	Back		Back / Return
	i More		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right

**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Volume+		Vol+
	Mute		Mute / Dimmer
	Volume-		Vol-
	CH/PG+		CH+ / Page+
	CH/PG-		CH- / Page-
	Recorded TV		Display / Media
	Guide		Guide / EPG / -/-
	Live TV		AV / Input / RDS
	Live TV		TV/Radio /
	Format / DVD		D.Menu / Top
	Format / DVD		Picture / Format
	Format / DVD		Menu / Home
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	*	+	Shift + Guide / EPG / -/-
	0		0
# button"/>	#	+	Shift + Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	[T] Teletext		Text / Goto
	Enter		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung


