



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Power	+	Shift + Power
	TV Vol+	+	Shift + Vol+
	TV Vol+		Vol+
	TV CH+	+	Shift + CH+ /
	Drive Select		Text / Goto
	TV AV	+	Shift + AV / Input / RDS
	TV Vol-	+	Shift + Vol-
	TV Vol-		Vol-
	TV CH-	+	Shift + CH- /
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	7		7
	8		8
	9		9
	ShowView		Picture / Format
	*/Delete	+	Shift + Exit / Cancel / Clear
	0		0
	Input Select		AV / Input / RDS
	Status		Info / Angle
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
<< button"/>	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play / 1.3		Play / Slow
	Time Slip		Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

	Prog / Check		TV/Radio /
	Exit		Exit / Cancel / Clear
	Direct Navigator		Smart / List
	Left / < l		Left
	Up		Up
	Right / >		Right
	Function Menu		Menu / Home
	OK		OK
	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red / Audio		Audio / Lang I/II
	Red / Audio		Red / Netflix / Search
	Green / Display		Display / Media
	Green / Display		Green / APP / Repeat
	Yellow / Create Chapter		Yellow / YouTube / Repeat
	Blue/ Manual Skip		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	Ext Link		D.Menu / Top
	Direct Tv Rec		Eject / Surround

