



Originalfernbedienung Ersatzfernbedienung

	On		Power
	Auto		2
	Off	+	Shift + Power
	Menu		Menu / Home
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	V.Keystone+		CH+ / Page+
	Blank		Exit / Cancel / Clear
	Info		Info / Angle
	V.Keystone-		CH- / Page-
	Still		Pause / Step / Freeze
	Video		4
	Comp		1

Originalfernbedienung Ersatzfernbedienung

	HDMI		0
	S-Video		5
	PC		Fav / Marker / PC
	Install		D.Menu / Top
	P.Size		Zoom / Size
	P.Mode		Picture / Format

