



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Top Menu		Sound / Title
	Subtitle		Subtitle / EQ
	Display		Display / Media
	Setup		Setup / OPT /
	1		1
	2		2
	3		3
	Disc		Red / Netflix / Search
	4		4
	5		5
	6		6
	>10/-/-		Guide / EPG / -/-
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu / Home
	EQ		Shift + Subtitle / EQ
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Marker		Fav / Marker / PC
	3D AI		TV/Radio /
	Down		Down
	Angle		Info / Angle
	AV Effect		AV / Input / RDS
	Prologic		Zoom / Size
	CH Select		Green / APP / Repeat
	Test		Text / Goto
	Digital S.Woofer		Blue / Prime Video / Random



