










 

 







 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	Smart Colors		Display / Media
	FAV		Fav / Marker / PC
	123		1
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	←		Back / Return
	[=]		D.Menu / Top
	Home		Menu / Home
	Vol+		Vol+
	* Up		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	* Down		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	YouTube		Yellow / YouTube / Repeat
	Disney+		Green / APP / Repeat
	prime video		Blue / Prime Video / Random
	Google Play		Red / Netflix / Search

