



Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	BD		Shift + 9
	DVD		Shift + 2
	SAT		Shift + Fav / Marker / PC
	HDMI		Shift + 0
	iPod / USB		Shift + 8
	ADPT		Shift + 4
	MHL		Shift + Guide / EPG / -/-
	NETWORK		Shift + 7
	TUNER		Shift + 6
	TV		Shift + 1
	CD		Shift + 3
	INPUT PREV.		CH- / Page-
	INPUT NEXT		CH+ / Page+
	Volume+		Vol+
	Volume-		Vol-
	Status		Shift + Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Top Menu		D.Menu / Top
	Up		Up
	Tools Menu		Setup / OPT /
	Video P		Picture / Format
	Left		Left
	Enter		OK
	Right		Right
	Home Menu		Menu / Home
	Down		Down
	Return		Back / Return
	Auto		Red / Netflix / Search
	Surr		Green / APP / Repeat
	Adv		Yellow / YouTube / Repeat
	CH LV		Smart / List
	Pause		Pause / Step / Freeze

 



 






 













Originalfernbedienung Ersatzfernbedienung

	MPX		Text / Goto
	BAND		TV/Radio /
	Play		Play / Slow
	PTY		Info / Angle
	Stop		Stop / Hold
	Preset -		Shift + I<< / Preset-
	I<<		I<< / Preset-
	Preset+		Shift + >>I / Preset+
	>>I		>>I / Preset+
	Tune-		Shift + << /
	<<		<< / Tune-
	Tune+		Shift + >> /
	>>		>> / Tune+
	1		1
	2		2
	3		3
	+Fav		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	DISP		Display / Media
	7		7
	8		8
	9		9
	Repeat		Shift + Green / APP /
	CH+		Shift + CH+ /
	D.Access		Exit / Cancel / Clear
	0		0
	Class		Shift + Exit / Cancel / Clear
	Shuffle		Shift + Blue / Prime
	CH-		Shift + CH- /
	Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer

