



 











 
 


















 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Picture		Picture / Format
	Input TV		AV / Input / RDS
	Input AV	 + 	Shift + AV / Input / RDS
	Netflix	 + 	Shift + Red / Netflix /
	Rakuten TV	 + 	Shift + Guide / EPG / -/--
	Prime Video	 + 	Shift + Blue / Prime
	YouTube	 + 	Shift + Yellow / YouTube /
	My App		TV/Radio /
	Apps	 + 	Shift + Green / APP /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Home	 + 	Shift + Menu /
	Home		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Option		Setup / OPT /
	Down		Down
	Back		Back / Return
	Provider / List		Smart / List
	Mic		Sound / Title
	Scenery		D.Menu / Top
	I<< / <<		<< / Tune-
	Play		Play / Slow
	>> / >>I		>> / Tune+
	Stop		Stop / Hold



