



Originalfernbedienung Ersatzfernbedienung















 

 




 










	Power		Power
	Power Tv	+	Shift + Power
	DVD	+	Shift + 2
	VCR	+	Shift + 4
	Eject/Open-Close		Eject / Surround
	AV Input Tv	+	Shift + AV / Input / RDS
	1		1
	2		2
	3		3
	PR+ Tv	+	Shift + CH+ /
	4		4
	5		5
	6		6
	PR- Tv	+	Shift + CH- /
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	Vol+ Tv		Vol+
	Rec		Rec / Rec Mode
	0		0
	AV Input		AV / Input / RDS
	Vol- Tv		Vol-
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	PR/TRK+		CH+ / Page+
	Up		Up
	Menu/List		D.Menu / Top
	Left		Left




Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	PR/TRK-		CH- / Page-
	Display		Display / Media
	O))/Audio		Audio / Lang I/II
	Title		Sound / Title
	Marker		Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	Red/FAV		Red / Netflix / Search
	Green/Repeat		Green / APP / Repeat
	Yellow/Subtitle		Yellow / YouTube / Repeat
	Blue/Text		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	Dubbing		Picture / Format

Originalfernbedienung Ersatzfernbedienung

