








 


























Originalfernbedienung Ersatzfernbedienung

	Color		Picture / Format
	Dimmer		Mute / Dimmer
	Standby/On		Power
	Clock/Timer		Shift + Sleep / Timer
	FM Mode		TV/Radio /
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	Display		Display / Media
	4		4
	5		5
	6		6
	7		7
	PTY		Red / Netflix / Search
	8		8
	TA/News/Info		Info / Angle










 



Originalfernbedienung Ersatzfernbedienung

	9		9
	Display(9)		Shift + Display / Media
	Set		Menu / Home
	10/←		Guide / EPG / -/-
	0		0
	- Select		Left
	→/+10		Fav / Marker / PC
	Select+		Right
	Cancel		Exit / Cancel / Clear
	Rev. Mode		Back / Return
	Repeat		Green / APP / Repeat
	Play Mode		Subtitle / EQ
	CD Play/Pause		Play / Slow
	FM/AM		Shift + 6
	Tape/<>		Shift + 5
	AUX/MD		AV / Input / RDS
	I<<		I<< / Preset-





Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	>>I		>>I / Preset+
	Beep		Setup / OPT /
	Sound Mode/♪		Sound / Title
	Ahb Pro		Smart / List
	Vol-		Vol-
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

