



**Originalfernbedienung    Ersatzfernbedienung**

	Display		Display / Media
	Search		Sleep / Timer
	Standby	 + 	Shift + Power
	Operate		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Mode		Picture / Format
	0/10		0
	>10		Guide / EPG / /--
	Tune+		>> / Tune+

**Originalfernbedienung    Ersatzfernbedienung**

	Mega Bass		Audio / Lang I/II
	Vol+		Vol+
	Tune-		<< / Tune-
	Sound		Sound / Title
	Vol-		Vol-
	Band		TV/Radio /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Stop Tape		OK
	< Tape		Left
	Tape >		Right
	Rec/Pause Tape		Rec / Rec Mode
	<< Tape		CH- / Page-
	Tape >>		CH+ / Page+

