



































Originalfernbedienung Ersatzfernbedienung









 













On/Off		Power
Mute		Mute / Dimmer
Freeze		Pause / Step / Freeze
East		Rec / Rec Mode
Lang./Rewind		<< / Tune-
Lang./Rewind		Sound / Title
Audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
		Eject / Surround
Zoom		Zoom / Size
Sleep Timer		Sleep / Timer
Scan/Setup		D.Menu / Top
Opt?		Setup / OPT /
Text		Text / Goto
TV/SAT		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up

Originalfernbedienung Ersatzfernbedienung



Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
		Smart / List
CH/Page+		CH+ / Page+
Volume-		Vol-
Display		Display / Media
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4



Originalfernbedienung Ersatzfernbedienung

5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
PWR On/Off	 + 	Shift + Power
TV	 + 	Shift + 1
Video	 + 	Shift + 4
Epg	 + 	Shift + Guide / EPG / -/--
TV/SAT	 + 	Shift + 0

Originalfernbedienung Ersatzfernbedienung

App	 + 	Shift + Green / APP /

