



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Function		Smart / List
	1 / CD		1
	1 / CD		Shift + 3
	2 / VCR		2
	2 / VCR		Shift + 4
	3 / DVD		3
	3 / DVD		Shift + 2
	4		4
	5 / SAT		5
	5 / SAT		Shift + 0
	6		6
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer
	0		0

Originalfernbedienung Ersatzfernbedienung

	DRC		Picture / Format
	TUNER		TV/Radio /
	TUNER		Shift + 6
	Mo. / St.		Sound / Title
	Input Mode		AV / Input / RDS
	Volume+		Vol+
	Volume-		Vol-
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Tuning Mode		Guide / EPG / -/-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Info		Info / Angle
	Sub Woofer		Eject / Surround



