

















Originalfernbedienung Ersatzfernbedienung

	INPUT HDMI		0
	POWER		Power
	INPUT		Fav / Marker / PC
	INPUT VIDEO		4
	INFO		Info / Angle
	KEystone		Text / Goto
	Auto Set / Cancel		Setup / OPT /
	UP		Up
	LEFT / VOL-		Left
	RIGHT / Vol+		Right
	DOWN		Down
	MENU		Menu / Home
	SELECT		OK
	FREEZE		Pause / Step / Freeze
	NO SHOW		Stop / Hold
	PAGE UP		CH+ / Page+
	D. ZOOM +		Smart / List

Originalfernbedienung Ersatzfernbedienung

	P-TIMER		Sleep / Timer
	PAGE DOWN		CH- / Page-
	D. ZOOM -		Display / Media
	MUTE		Mute / Dimmer
	LAMP		D.Menu / Top
	SCREEN		Zoom / Size
	IMAGE		Picture / Format

