 


 
 

 

 

 

 

 





 





 


 
 

 

 
 




 


 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	YPbPr		Shift + 3
	MTS		Audio / Lang I/II
	VGA		Shift + 2
	TV		Shift + 1
	AV		Shift + AV / Input / RDS
	HDMI		Shift + 0
	EPG		Guide / EPG / -/--
	Aspect		Setup / OPT /
	Aspect		Shift + Picture / Format
	Menu		Menu / Home
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	TV Display		Display / Media
	Vol+		Vol+
	S.M		Sound / Title
	CH+		CH+ / Page+
	Vol-		Vol-
	P.M		Picture / Format
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Originalfernbedienung Ersatzfernbedienung


5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
	•	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Originalfernbedienung Ersatzfernbedienung



 

 







 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	YPbPr		Shift + Menu /
	CC		Subtitle / EQ
	MTS		D.Menu / Top
	VGA		Sleep / Timer
	DTV strength		Setup / OPT /
	TV		Shift + 1
	AV		AV / Input / RDS
	HDMI		Shift + 0
	CHList		Smart / List
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Aspect		Zoom / Size
	Menu		Menu / Home
	Up		Up
	Source		Shift + AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Tv Display		TV/Radio /
	Vol+		Vol+
	S.M		Sound / Title
	CH+		CH+ / Page+
	Vol-		Vol-
	P.M		Picture / Format
	CH-		CH- / Page-
	1		1





Originalfernbedienung Ersatzfernbedienung

2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
.	.	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/--
0	0	HDMI - SAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Originalfernbedienung Ersatzfernbedienung

