







 





 




 





 

 

 




 




 





 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Red/TV		Red / Netflix / Search
	Green/AV		Green / APP / Repeat
	Yellow/USB		Yellow / YouTube / Repeat
	Blue/YBPBR		Blue / Prime Video / Random
	HDMI		Shift + 0
	VGA		Setup / OPT /
	Flip		Smart / List
	Zoom		Zoom / Size
	I<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>		>>  / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

 

 

 









 

 

 





Originalfernbedienung Ersatzfernbedienung

	Lang		Audio / Lang I/II
	Sub.		Subtitle / EQ
	Source		AV / Input / RDS
	Up		Up
	Sleep		Sleep / Timer
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	4:3		Picture / Format
	CH+		CH+ / Page+
	Vol-		Vol-
	Goto		Text / Goto
	CH-		CH- / Page-





Originalfernbedienung    Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	FAV		Fav / Marker / PC

Originalfernbedienung    Ersatzfernbedienung