



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Snooze/Dimmer/S		Smart / List
	Light On/Off		OK
	Light-		Left
	Light+		Right
	Mood Light On/Off		Up
	Mood Light		Down
	Sound		Sound / Title
	C/F		Display / Media
	Vol+		Vol+
	[+]		Guide / EPG / -/--
	<</Recall		<< / Tune-
	MEM/M+		TV/Radio /
	>>/DST/NAP		>> / Tune+
	(1)		1
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

	(2)		2

