






 

 
 









 





 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Home		Menu / Home
	:=		Guide / EPG / -/--
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Vol+		Vol+
	(i)		Info / Angle
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	prime video		Shift + Blue / Prime
	YouTube		Shift + Yellow / YouTube /
	Google Play		Shift + Green / APP /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TXT		Text / Goto



