



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P-		Shift + CH- /
	P-		I<< / Preset-
	0 / Sleep		Shift + Sleep / Timer
	0 / Sleep		0
	P+		Shift + CH+ /
	P+		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Info		Info / Angle
	Subt		Subtitle / EQ
	Audio		Audio / Lang I/II
	List		Smart / List
	Vol+		Vol+
	M/P		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	TV/Radio		TV/Radio /
	CH-		CH- / Page-
	Text		Text / Goto
	Fav		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Menu		Menu / Home
	Down		Down
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	>		Shift + Pause / Step /
	Film		Display / Media
	Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

	Timer		Sleep / Timer
	USB		Shift + 8
	USB		AV / Input / RDS

