

































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Shift + 2
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Return		Back / Return
	0		0
	Display		Display / Media
	Disc Menu		D.Menu / Top
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	System Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	I<<		I<< / Preset-
	Down		Down
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause / Step		Pause / Step / Freeze
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Angle		Info / Angle
	Zoom		Zoom / Size
	Repeat		Green / APP / Repeat





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Repeat A-B		Yellow / YouTube / Repeat
	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Title		Sound / Title
	Shuffle		Blue / Prime Video / Random






 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Video		Setup / OPT /
	VCR		Shift + 4
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Display / Media
	Up		Up
	System Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	I<<		I<< / Preset-
	Down		Down
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause / Step		Pause / Step / Freeze
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Input		AV / Input / RDS
	Record		Rec / Rec Mode
	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Title		Sound / Title
	Child Lock		Zoom / Size

