



 

 




 

 

 

 





 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	1		1
	On Screen		Display / Media
	2		2
	Repeat		Green / APP / Repeat
	3		3
	Program		TV/Radio /
	Sleep		Sleep / Timer
	4		4
	Surround		Shift + Eject / Surround
	5		5
	Sound		Sound / Title
	6		6
	Zoom		Zoom / Size
	Aspect		Shift + Picture / Format
	7		7

Originalfernbedienung Ersatzfernbedienung

	User		Guide / EPG / -/--
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Color Mode		Picture / Format
	Break		Fav / Marker / PC
	Play		Play / Slow
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Setup		Setup / OPT /
	Up		Up
	Menu		Menu / Home



