



Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	Bluetooth	+	Shift + 9
	USB	+	Shift + 8
	AUX/Digital	+	Shift + 7
	Net	+	Shift + Display / Media
	Tuner	+	Shift + 6
	CD	+	Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	Memory		Guide / EPG / -/-
	0		0
	Option		Setup / OPT /
	Left		<< / Tune-
	Right		>> / Tune+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Volume+		Vol+
	Mute		Mute / Dimmer
	Volume-		Vol-
	Repeat		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

SHUFFLE	Shuffle	Prime Video RANDOM	Blue / Prime Video / Random
DISPLAY	Display	MEDIA DISPLAY	Display / Media
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
HOME	Home	HOME MENU	Menu / Home
A	Favorites A	TITLE SOUND	Sound / Title
B	Favorites B	LANG I/II AUDIO	Audio / Lang I/II
C	Favorites C	EQ SUBTITLE	Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

