



**Originalfernbedienung Ersatzfernbedienung**

	Open/Close		Eject / Surround
	Power		Power
	Bluetooth		Shift + 9
	USB		Shift + 8
	AUX/Digital		Shift + 7
	Net		Shift + Display / Media
	Tuner		Shift + 6
	CD		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

**Originalfernbedienung Ersatzfernbedienung**

	Memory		Guide / EPG / -/--
	0		0
	Option		Setup / OPT /
	Left		<< / Tune-
	Right		>> / Tune+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Volume+		Vol+
	Mute		Mute / Dimmer
	Volume-		Vol-
	Repeat		Green / APP / Repeat



