



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Eject/Open/Close		Eject / Surround
	CD/DVD		Shift + 2
	VCR		Shift + 4
	FM/AM		Shift + 6
	AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	AV		AV / Input / RDS
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Show View		Smart / List
	RDS		Picture / Format
	Display/CLK/CN		Display / Media
	PR/TRK/Preset Up		Up
	Set Up/i		Setup / OPT /
	Left/Tuning-		Left
	OK/Memory/Ent		OK
	Right/Tuning+		Right
	Return		Back / Return
	PR/TRK/Preset		Down
	Disc menu		D.Menu / Top
	Volume+		Vol+
	Rec/ITR		Rec / Rec Mode





Originalfernbedienung Ersatzfernbedienung

	I << / Backward		I << / Preset-
	>> I / Forward		>> I / Preset+
	Stop		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Volume-		Vol-
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	S-Title		Subtitle / EQ
	Mute		Mute / Dimmer
	Angle/CM Skip		Info / Angle
	Repeat A-B/Speed		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Tv/VCR		Shift + TV/Radio / Program
	Random		Blue / Prime Video / Random
	Title		Shift + Sound / Title
	Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Eject/Open/Close		Eject / Surround
	CD/DVD		Shift + 2
	VCR		Shift + 4
	FM/AM		Shift + 6
	AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	AV		AV / Input / RDS
	7		7
	8		8
	9		9
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Show View		Smart / List
	RDS		Picture / Format
	Display/CLK/CN		Display / Media
	PR/TRK/Preset Up		Up
	Set Up/i		Setup / OPT /
	Left/Tuning-		Left
	OK/Memory/Ent		OK
	Right/Tuning+		Right
	Return		Back / Return
	PR/TRK/Preset		Down
	Disc Menu		D.Menu / Top
	Volume+		Vol+
	Rec/ITR		Rec / Rec Mode




**Originalfernbedienung Ersatzfernbedienung**

BACKWARD	I<</Backward	PRESET-	I<< / Preset-
FORWARD	>>I/Forward	PRESET+	>>I / Preset+
STOP	Stop	HOLD	Stop / Hold
PAUSE/STEP	Pause/Step	STEP-FREEZE	Pause / Step / Freeze
PLAY	Play	SLOW	Play / Slow
VOLUME-	Volume-	VOL	Vol-
MARKER	Marker	PC FAV MARKER	Fav / Marker / PC
SEARCH	Search	NETFLIX SEARCH	Red / Netflix / Search
S-TITLE	S-Title	EQ SUBTITLE	Subtitle / EQ
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
ANGLE CM SKIP	Angle/CM Skip	ANGLE INFO	Info / Angle
REPEAT A-B SPEED	Repeat A-B/Speed	YouTube REPEAT A-B	Yellow / YouTube / Repeat
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
TV/VCR	TV/VCR	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
TITLE	Title	SHIFT + TITLE SOUND	Shift + Sound / Title
ZOOM	Zoom	SIZE ZOOM	Zoom / Size

**Originalfernbedienung Ersatzfernbedienung**


