



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------------|---|-----------------|
|  | Power Receiver |  | Power |
|  | DVD |  | Shift + 2 |
|  | TV |  | Shift + 1 |
|  | DVD Recorder |  | Shift + 5 |
|  | VCR |  | Shift + 4 |
|  | Tuner / Band |  | Shift + 6 |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Volume+ |  | Vol+ |
|  | Disc / Direct Tuning |  | Display / Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-------------------|
|  | 0 |  | 0 |
|  | ≥10 / -/- |  | Guide / EPG / -/- |
|  | Volume- |  | Vol- |
|  | I<< / << |  | I<< / Preset- |
|  | >> / >>I |  | >>I / Preset+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu / Play List |  | Menu / Home |
|  | Down |  | Down |
|  | Muting |  | Mute / Dimmer |
|  | Subwoofer |  | Eject / Surround |
|  | Test |  | Text / Goto |
|  | Level |  | Smart / List |
|  | Effect |  | Info / Angle |
|  | -/L |  | CH- / Page- |



