
 




 
 








 







**Originalfernbedienung Ersatzfernbedienung**

 Standby	 Power
 Open/Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Prog	 TV/Radio /
 4	 4
 5	 5
 6	 6
 A-B	 Yellow / YouTube / Repeat
 7	 7
 8	 8
 9	 9
 Repeat	 Green / APP / Repeat
 Goto	 Text / Goto
 0/10	 0

**Originalfernbedienung Ersatzfernbedienung**

 10+	10+	 GUIDE EPG	Guide / EPG / -/-
 ST/MO L/R	L/R/ST/Mo	 TITLE SOUND	Sound / Title
 P/N	P/N	 Prime Video RANDOM	Blue / Prime Video / Random
 AUDIO	Audio	 LANG I/II AUDIO	Audio / Lang I/II
 SUBTITLE	Subtitle	 EQ SUBTITLE	Subtitle / EQ
 MEM	Stop/Mem	 HOLD	Stop / Hold
 I<</Station-	I<</Station-	 PRESET-	I<< / Preset-
 >>/Station+	>>/Station+	 PRESET+	>> / Preset+
 FM/AM	Play/Pause/FM/AM	 SLOW	Play / Slow
 SLOW	Slow	 SHIFT + SLOW	Shift + Play /
 <</Search-	<</Search-	 TUNE-	<< / Tune-
 >>/Search+	>>/Search+	 TUNE+	>> / Tune+
 STEP	Step	 STEP-FREEZE	Pause / Step / Freeze
 MENU	Menu	 HOME MENU	Menu / Home
 RETURN	Return	 BACK	Back / Return
 ANGLE	Angle	 ANGLE INFO	Info / Angle
 Up	Up	 Up	Up



