



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	+	Shift + Power
	Sleep		Sleep / Timer
	CD	+	Shift + 3
	MD/CD-R	+	Shift + 5
	DVD	+	Shift + 2
	D-TV/CBL	+	Shift + 1
	TUNER	+	Shift + 6
	Multi CH In	+	Shift + 0
	V-AUX	+	Shift + 7
	DVR	+	Shift + 4
	Volume +		Vol+
	Volume -		Vol-
	Mute		Mute / Dimmer
	Stereo		1
	Music		2
	Entertain		3



Originalfernbedienung Ersatzfernbedienung

	Movie		4
	Standard		5
	Select		6
	Extd Sur.		7
	Direct ST		8
	Speakers		9
	Enhancer		Guide / EPG / -/-
	Night		0
	Straight		Fav / Marker / PC
	Level		Sound / Title
	Up / Preset/CH +		Up
	Set Menu		Menu / Home
	Left/-		Left
	Enter		OK
	Right/+		Right
	Return		Back / Return
	Down / Preset/CH		Down





Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	+	Shift + Power
	Sleep		Sleep / Timer
	CD	+	Shift + 3
	MD/CD-R	+	Shift + 5
	DVD	+	Shift + 2
	DTV/CBL	+	Shift + 1
	Tuner	+	Shift + 6
	Multi CH In	+	Shift + 0
	V-AUX / Dock	+	Shift + 7
	DVR	+	Shift + 4
	Volume +		Vol+
	Volume -		Vol-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Fav / Marker / PC
	Band		Sound / Title
	Preset+		Up
	Preset+		>> / Preset+
	Srch Mode		Menu / Home
	Left / A/B/C/D/E-		Left
	Enter		OK
	Right / A/B/C/D/E+		Right
	Return		Back / Return
	Preset-		Down





Originalfernbedienung Ersatzfernbedienung

	Preset-		I<< / Preset-
	Display		Display / Media
	Freq/Text		Red / Netflix / Search
	PTY Seek Mode		Yellow / YouTube / Repeat
	PTY Seek Start		Blue / Prime Video / Random
	EON		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

