 

 
 











 



















 
 
 


 






 











 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Home		Shift + Menu /
	FM/AM		Shift + 6
	AV		AV / Input / RDS
	PIP		Picture / Format
	1		1
	2		2
	3		3
	Test Tone		Text / Goto
	4		4
	5		5
	6		6
	[...]/Subtitle		Subtitle / EQ
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Title		Shift + Sound / Title
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Zoom		Zoom / Size
	Audio/Mo./St.		Audio / Lang I/II
	Sound		Sound / Title
	XTS Pro		Shift + Audio / Lang I/II
	Level/Delay		Smart / List
	Menu/List		Menu / Home
	PR/Preset+		CH+ / Page+
	Up		Up
	Setup		Setup / OPT /
	Left/Tun-		Left
	Memory/Enter		OK
	Right/Tun+		Right
	Display		Display / Media



 




Originalfernbedienung Ersatzfernbedienung

	PR/Presets-		CH- / Page-
	Down		Down
	Return		Back / Return
	I<</Skip-		I<< / Preset-
	>>I/Skip+		>>I / Preset+
	Vol+		Vol+
	<</Scan-		<< / Tune-
	>>/Scan+		>> / Tune+
	Vol-		Vol-
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Rec Mode		Shift + Rec / Rec Mode
	Timer Rec		Sleep / Timer
	Mute		Mute / Dimmer
	Dubbing		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	CHP ADD		Shift + Fav / Marker / PC
	Repeat		Green / APP / Repeat
	Repeat A/B		Yellow / YouTube / Repeat
	Thumbnail		Shift + Guide / EPG / -/--
	Timeshift		Info / Angle
	Instant Skip		Guide / EPG / -/--
	Clear		Exit / Cancel / Clear
	RDS/Resolution		Shift + AV / Input / RDS
	PTY		D.Menu / Top
	ShowView		Shift + Smart / List
	Tv/DVD		TV/Radio /

