







 







 









Originalfernbedienung Ersatzfernbedienung

	Mult		Smart / List
	Search		Red / Netflix / Search
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Esc		Exit / Cancel / Clear
	0		0
	-/--		Guide / EPG / -/--
	Up		Up
	Left		Left
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	ADD		Fav / Marker / PC
	Down		Down
	FN		Info / Angle
	I<		I<< / Preset-
	I>		Pause / Step / Freeze
	</		CH- / Page-
	>>		>> / Tune+
	>		>> / Preset+
	Rec		Rec / Rec Mode
	>/		CH+ / Page+

