


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Muting		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<</Preset-		I<< / Preset-
	>>I/Preset+		>>I / Preset+
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle/D.Tuning		Subtitle / EQ
	Picture Navi		Picture / Format
	S-Air Mode		Zoom / Size
	Sleep		Sleep / Timer
	Tv Input		AV / Input / RDS
	System		D.Menu / Top

Menu/Enter

Menu

Originalfernbedienung Ersatzfernbedienung

	Display/Tools		Setup / OPT /
	One -Touch Play		Text / Goto
	Menu/DVD		Menu / Home
	Theatre		TV/Radio /
	Up		Up
	Angle		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Volume+		Vol+
	Dynamic Bass		Smart / List
	Function+		CH+ / Page+
	Volume-		Vol-
	Display		Display / Media





Originalfernbedienung Ersatzfernbedienung

	Function-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Night		Red / Netflix / Search
	DVD Top Menu		Green / APP / Repeat
	Disc Skip		Blue / Prime Video / Random
	Power Tv		Shift + Power
	Tv Vol-		Shift + Vol-
	Tv Vol+		Shift + Vol+























Originalfernbedienung Ersatzfernbedienung

	→/ > Step/Advance		Shift + >> /
	←/ < Step/Replay		Shift + << /



 










 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv Vol+		Vol+
	Tv Input		AV / Input / RDS
	Tv Vol-		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Enter		Fav / Marker / PC
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Muting		Mute / Dimmer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Tools		Setup / OPT /
	Prog-		CH- / Page-
	Prog+		CH+ / Page+

