



















 
 
 


 


 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Picture		Picture / Format
	TV Input		TV/Radio /
	AV Input		AV / Input / RDS
	Netflix		Shift + Red / Netflix /
	Rakuten Tv		D.Menu / Top
	Prime video		Shift + Blue / Prime
	Youtube		Shift + Yellow / YouTube /
	My App		Shift + Green / APP /
	Apps		Sleep / Timer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Home		Shift + Menu /
	Guide		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Option		Setup / OPT /
	Down		Down
	Back		Back / Return
	List/Provider		Smart / List
	Voice		Display / Media
	Scenery		Zoom / Size
	I<</<<		<< / Tune-
	Play		Play / Slow
	>>/>>I		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	REC		Rec / Rec Mode
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Text		Text / Goto
	CH-		CH- / Page-
	STTL		Subtitle / EQ
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	?/eHelp		Eject / Surround
	0		0
	Last View		Fav / Marker / PC

