




Originalfernbedienung Ersatzfernbedienung









 

	Standby		Power
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Recall		Back / Return
	Vol+		Vol+
	CH-		CH- / Page-
	Pause		Pause / Step / Freeze
	Vol-		Vol-
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/-

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	FAV		Fav / Marker / PC
	1		1
	2		2
	3		3
	Page+		Shift + CH+ /
	4		4
	5		5
	6		6
	Page-		Shift + CH- /
	7		7
	8		8
	9		9
	0		0
	Audio		Audio / Lang I/II
	Lang		Shift + Audio / Lang I/II
	Tv/Radio		TV/Radio /





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	TTX		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

