











 









 







 













 





 



 

 

 

 

 



 





Originalfernbedienung Ersatzfernbedienung



 
	Power		Power
	Eject		Eject / Surround
	Angle		Info / Angle
	Repeat		Shift + Green / APP / REPEAT
	Q-Play		D.Menu / Top
	Search		Shift + Red / Netfix / SEARCH
	1		1
	2		2
	3		3
	List/PBC		Smart / List
	4		4
	5		5
	6		6
	Zoom		Zoom / Size
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

 



 



	0		0
	Setup		Setup / OPT /
	Up		Up
	CH+		CH+ / Page+
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	PgUp/Title		Sound / Title
	CH-		CH- / Page-
	Down		Down
	PgDn/Menu		Menu / Home
	EPG/P/N		Guide / EPG / -/-
	Exit/Slow		Exit / Cancel / Clear
	Info/Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-




**Originalfernbedienung    Ersatzfernbedienung**

	Tv/Radio		TV/Radio /
	TTX		Text / Goto
	FAV/A-B		Fav / Marker / PC
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	<<		<< / Tune-
	>>		>> / Tune+
	Blue		Blue / Prime Video / Random

**Originalfernbedienung    Ersatzfernbedienung**

	Video		Shift + 4
	USB		Shift + 8
	DVD/DVB		Shift + 2
	Random		Shift + Blue / Prime

