
 
 

























**Originalfernbedienung Ersatzfernbedienung**

	Power/On		Power
	Tape	 + 	Shift + 5
	Tu/Band		TV/Radio /
	I<</Tuning-		I<< / Preset-
	>>I/Tuning+		>>I / Preset+
	Preset/Repeat		Green / APP / Repeat
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Memory		OK
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

**Originalfernbedienung Ersatzfernbedienung**

	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Bass		Audio / Lang I/II
	Sound Preset		Sound / Title
	Volume-		Vol-
	Volume+		Vol+

