



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	0		0
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	>>		>> / Tune+
	Play		Play / Slow
	>>I		>>I / Preset+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Menu		Menu / Home
	Setup		Setup / OPT /
	Title		Sound / Title
	Add/Clear		Fav / Marker / PC
	Angle		Info / Angle
	P/N		Guide / EPG / -/-
	Audio		Audio / Lang I/II



