




 

 

 





 

 







 















**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject / Surround
	N/P		Red / Netflix / Search
	1		1
	2		2
	3		3
	Video		Shift + 4
	4		4
	5		5
	6		6
	Intro		AV / Input / RDS
	7		7
	8		8
	9		9
	Default		Smart / List
	Goto		Text / Goto
	0		0

**Originalfernbedienung Ersatzfernbedienung**

	10+		Guide / EPG / -/--
	Karaoke		TV/Radio /
	Zoom		Zoom / Size
	Menu/PBC		Menu / Home
	Setup		Setup / OPT /
	3D		Picture / Format
	Up		Up
	Left/Echo-		Left
	Enter		OK
	Right/Eco+		Right
	Down		Down
	Title		Sound / Title
	OSD		Display / Media
	Prog		Shift + TV/Radio / Program
	Clear		Exit / Cancel / Clear
	Mark		Fav / Marker / PC
	>>		>> / Tune+



