










































 




 
 







 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	I-II/Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0


Originalfernbedienung Ersatzfernbedienung

	-/--/+10		Guide / EPG / -/--
	QV		Info / Angle
	Tv Menu		Menu / Home
	Tv/Text		Text / Goto
	Mix		Setup / OPT /
	Call		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	P+		CH+ / Page+
	Red/DVD Setup		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung	Ersatzfernbedienung
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Subtitle / EQ
	 Pause / Step / Freeze
	 Play / Slow
	 Zoom / Size
	 Display / Media
	 D.Menu / Top
	 Shift + Up
	 I<< / Preset-
	 >>I / Preset+
	 Shift + Left
	 Shift + OK
	 Shift + Right
	 Eject / Surround
	 Stop / Hold
	 Shift + Down

Originalfernbedienung	Ersatzfernbedienung
	 << / Tune-
	 >> / Tune+

