


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TXT		Text / Goto
	MIX		Smart / List
	Size		Zoom / Size
	Index		Info / Angle
	Hold		Shift + Stop /
	Reveal		D.Menu / Top
	Subcode		Display / Media
	Cancel		Shift + Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	Timer		Sleep / Timer
	0		0
	Recall		Back / Return
	Red/P.M.		Red / Netflix / Search
	CH+		CH+ / Page+
	Vol+		Vol+
	Yellow/Sleep		Yellow / YouTube / Repeat
	Green/S.M.		Green / APP / Repeat
	CH-		CH- / Page-
	Vol-		Vol-
	Blue/Call		Blue / Prime Video / Random
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Select		OK







 





Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Mute		Mute / Dimmer
	Aspect		Picture / Format
	Setup/Freeze		Setup / OPT /
	Subtitle/I/II		Subtitle / EQ
	Display/FAV		Fav / Marker / PC
	Search/FAV+/-		TV/Radio /
	Setup/EPG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	Title		Sound / Title
	DVD		Shift + 2
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Eject		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+

