

 





 

 



 

 











 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Lang		Audio / Lang I/II
	4		4
	5		5
	6		6
	Time Shift		D.Menu / Top
	7		7
	8		8
	9		9
	Tv/Radio		TV/Radio /
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Dev.List		Display / Media
	EPG		Guide / EPG / -/-
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Auto		Setup / OPT /
	Menu		Menu / Home
	Zoom		Zoom / Size
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	CH-		CH- / Page-



