









 

 













 



 

 





Originalfernbedienung	Ersatzfernbedienung
	Power 
	Goto 
	Source 
	Mute 
	1 
	2 
	3 
	4 
	5 
	6 
	7 
	8 
	9 
	0 
	10+ 
	Step 
	Subtitle 

Originalfernbedienung	Ersatzfernbedienung
	Angle 
	Audio 
	PBC 
	Title 
	Up 
	Stop / Hold 
	Play / Slow 
	Pause / Step / Freeze 
	Left 
	OK 
	Right 
	Slow 
	Setup / OPT / 
	Down 
	Zoom / Size 
	Menu / Home 
	Repeat 





Originalfernbedienung **Ersatzfernbedienung**

AB	A-B		Yellow / YouTube / Repeat
	l<<		l<< / Preset-
	>>l		>>l / Preset+
PROGRAM	Program		TV/Radio /
DISPLAY	Display		Display / Media
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung **Ersatzfernbedienung**

