




 













 





 

 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Repeat		Text
	A-B Repeat		Options
	Shuffle		AV
	Scan		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DVD Menu		D. Menu
	0		0
	OSD Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Up		Up
	P+		Ch +
	OK		Ok
	Left		Left
	Vol-		Vol -
	Right		Right
	Vol+		Vol +
	[...]		Subt
	Down		Down
	P-		Ch -
	Audio		Dual
	T-C		TV/R
	Angle		Format
	Zoom		Eject
	<<		<<
	I<		I<<



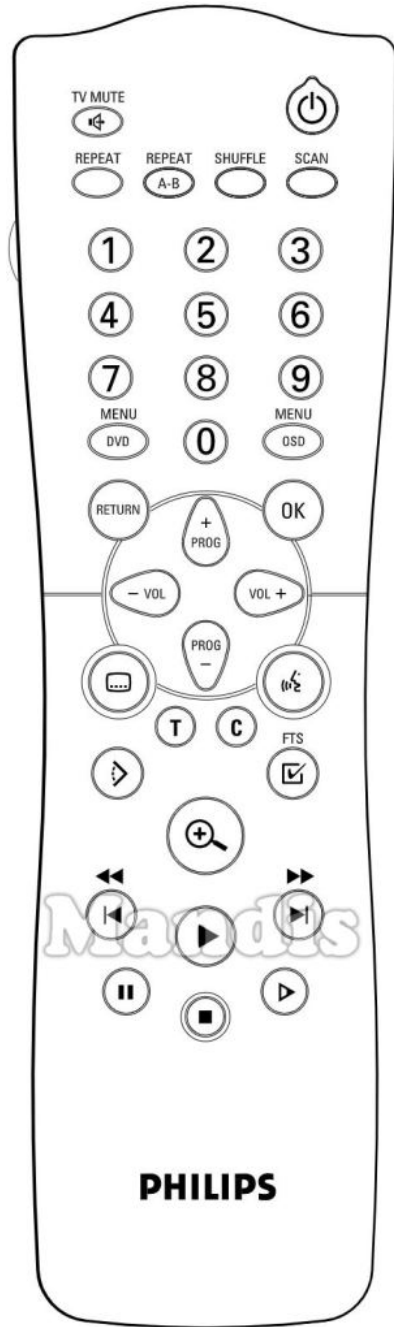


Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>		>>
	>		>>
	Pause		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung


 


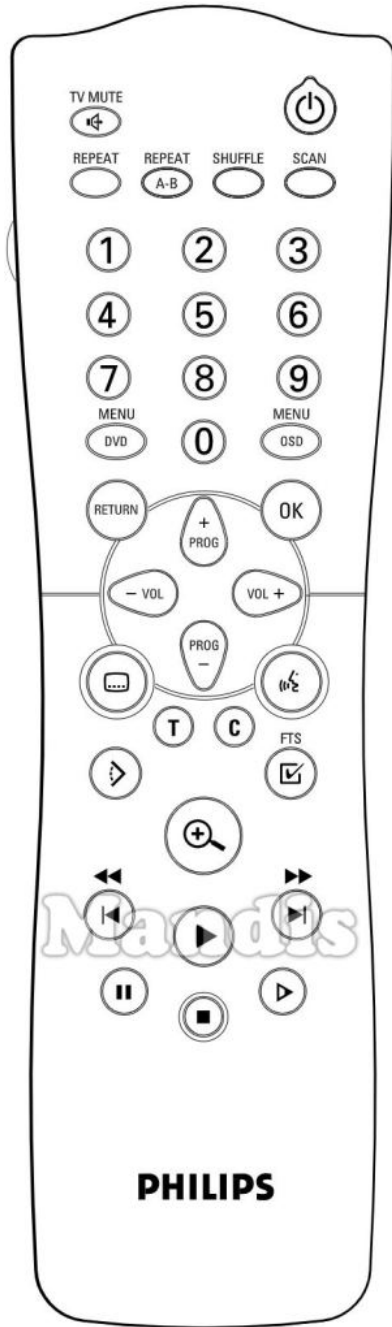








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	OK		Ok
	Vol -		Vol -
	Left		Left
	Vol +		Vol +
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	I<<		I<<
	I<<		I<<
	I<<		I<<
	I<<		I<<
	I<<		I<<
	I<<		I<<
	I<<		I<<
	I<<		I<<
	I<<		I<<
	I<<		I<<
	Stop		Stop

