







 
 











**Originalfernbedienung Ersatzfernbedienung**

	Tv/AV		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PSM		Guide / EPG / -/--
	0		0
	SSM		Fav / Marker / PC
	I/II		Audio / Lang I/II
	*		Sleep / Timer
	Picture		Picture / Format

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu / Home
	Sound		Sound / Title
	Up		Up
	PR+		CH+ / Page+
	Vol+		Vol+
	Right		Right
	Vol-		Vol-
	Left		Left
	OK		OK
	Down		Down
	PR-		CH- / Page-
	PIP		Zoom / Size
	Mute		Mute / Dimmer
	Red/PIP PR-		Red / Netflix / Search
	Green/ PIPPR+		Green / APP / Repeat
	ARC		Display / Media
	Blue/PIP Input		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	Yellow/PIP Swap		Yellow / YouTube / Repeat
	Text		Text / Goto
	≡X/Position		Back / Return
	≡i/9/4PIP		Exit / Cancel / Clear
	≡+/Still		Info / Angle
	≡◆/Size		Shift + Picture / Format
	≡/ /Mix		Subtitle / EQ
	≡O/Time		Setup / OPT /
	≡?/Reveal		TV/Radio /
	≡M/Sleep		Shift + Power
	List		Smart / List
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Pause/Still		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung