





 




 








 

 









 

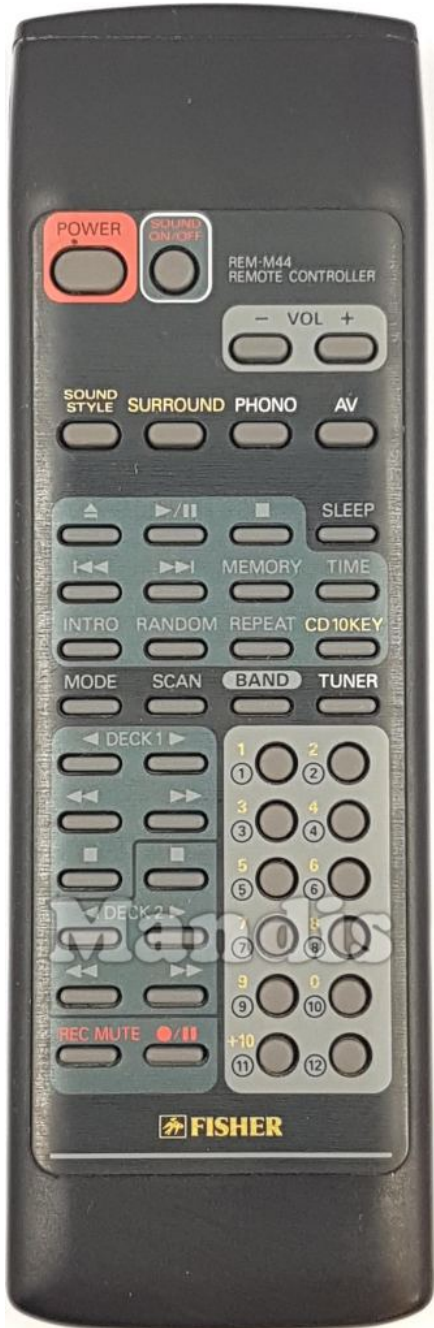 

**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Sound On/Off		Sound / Title
	Vol-		Vol-
	Vol+		Vol+
	Sound Style		Audio / Lang I/II
	Surround		Shift + Eject / Surround
	Phono		TV/Radio /
	AV		AV / Input / RDS
	Open/Close		Eject / Surround
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	Sleep		Sleep / Timer
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Memory		Fav / Marker / PC
	Time		Shift + Sleep / Timer
	Intro		Yellow / YouTube / Repeat






 



 
 

 

 

 

 




 

 
 







**Originalfernbedienung Ersatzfernbedienung**

	Random		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	Mode		Picture / Format
	Scan		Smart / List
	Band		Display / Media
	Tuner		Red / Netflix / Search
	< Deck 1		Left
	Deck 1 >		Right
	1 CD		1
	1 Tuner		Shift + 1
	2 CD		2
	2 Tuner		Shift + 2
	<< Deck 1		Down
	>> Deck 1		Up
	3 CD		3
	3 Tuner		Shift + 3
	4 CD		4





Originalfernbedienung Ersatzfernbedienung

	4 Tuner		Shift + 4
	Stop Deck 1		OK
	Stop Deck 2		Shift + OK
	5 CD		5
	5 Tuner		Shift + 5
	6 CD		6
	6 Tuner		Shift + 6
	< Deck 2		Shift + Left
	Deck 2 >		Shift + Right
	7 CD		7
	7 Tuner		Shift + 7
	8 CD		8
	8 Tuner		Shift + 8
	<< Deck 2		Shift + Down
	>> Deck 2		Shift + Up
	9 CD		9
	9 Tuner		Shift + 9

Originalfernbedienung Ersatzfernbedienung

	0 CD		0
	10 Tuner		Shift + 0
	Rec/Mute Deck		Rec / Rec Mode
	Rec/Pause Deck 2		Pause / Step / Freeze
	+10 CD		Guide / EPG / -/-
	11 Tuner		Shift + Guide / EPG / -/-
	12 Tuner		Shift + Fav / Marker / PC

