



















 


















Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	TV		TV/Radio /
	Input		AV / Input / RDS
	I/II		Audio / Lang I/II
	List		Smart / List
	Q.View		Setup / OPT /
	Menu		Menu / Home
	Up		Up
	PR+		CH+ / Page+
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	OK/Stop		OK
	PR-		CH- / Page-
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SSM		Guide / EPG / -/-
	0		0
	PSM		Fav / Marker / PC
	Sleep		Sleep / Timer
	*		Display / Media
	[=]/Text		Text / Goto
	[=x]/Update		Picture / Format
	Blue		Blue / Prime Video / Random



