



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------------|
|  | Mute |  | Mute / Dimmer |
|  | Power |  | Power |
|  | TV/Radio |  | TV/Radio / |
|  | Guide |  | Guide / EPG / -/-- |
|  | Fav |  | Fav / Marker / PC |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Menu |  | Menu / Home |
|  | 0 / Swap |  | 0 |
|  | 0 / Swap |  | Back / Return |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------------------|---|-----------------------------|
|  | i |  | Info / Angle |
|  | Vol+ |  | Vol+ |
|  | OK |  | OK |
|  | CH+ |  | CH+ / Page+ |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Vol- |  | Vol- |
|  | Down |  | Down |
|  | CH- |  | CH- / Page- |
|  | Exit |  | Exit / Cancel / Clear |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | << / I<< / Instant Replay |  | << / Tune- |
|  | << / I<< / Instant Replay |  | I<< / Preset- |



