



 





 











































 




 
 





 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sources		AV / Input / RDS
	Text		Text / Goto
	T.Opt		Setup / OPT /
	AD		Audio / Lang I/II
	*		D.Menu / Top
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0

Originalfernbedienung Ersatzfernbedienung

	...		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Search		Sleep / Timer
	CH-		CH- / Page-
	TV		TV/Radio /
	Netflix		Shift + Red / Netflix /
	Home		Menu / Home
	Prime video		Shift + Blue / Prime
	Disney+		Display / Media
	Up		Up
	Rakuten Tv		Shift + Yellow / YouTube /
	Left		Left
	OK		OK
	Right		Right



