



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	DVD Menu		D.Menu / Top
	Up		Up
	Title		Sound / Title
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Return		Back / Return
	Pause/Step		Pause / Step / Freeze
	I<< Skip		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	Skip >>I		>>I / Preset+
	Stop		Stop / Hold
	<< Scan		<< / Tune-
	Play		Play / Slow
	Scan >>		>> / Tune+
	1		1
	2		2
	3		3
	Program		TV/Radio /
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	0		0



