














 

 
 





Originalfernbedienung Ersatzfernbedienung

|   |            |   |                           |
|---|------------|---|---------------------------|
|    | Power      |    | Power                     |
|    | Sleep      |    | Sleep / Timer             |
|    | Mute       |    | Mute / Dimmer             |
|    | Mode       |    | Display / Media           |
|    | 1          |    | 1                         |
|    | 2          |    | 2                         |
|    | 3          |    | 3                         |
|    | Nicam/A2   |    | Shift + Audio / Lang I/II |
|    | 4          |    | 4                         |
|    | 5          |    | 5                         |
|    | 6          |    | 6                         |
|  | TXT/Mix    |  | Text / Goto               |
|  | 7          |  | 7                         |
|  | 8          |  | 8                         |
|  | 9          |  | 9                         |
|  | TXT Cancel |  | Exit / Cancel / Clear     |
|  | 0          |  | 0                         |




 





Originalfernbedienung Ersatzfernbedienung

|   |                    |   |                    |
|---|--------------------|---|--------------------|
|    | Back               |    | Back / Return      |
|    | SYS Menu           |    | Menu / Home        |
|    | Picture            |    | Picture / Format   |
|    | Guide / EPG / -/-- |    | Guide / EPG / -/-- |
|    | Up                 |    | Up                 |
|    | Ch+                |    | CH+ / Page+        |
|    | Audio              |    | Audio / Lang I/II  |
|    | Left               |    | Left               |
|    | Ok                 |    | OK                 |
|    | Right              |    | Right              |
|    | Vol-               |    | Vol-               |
|  | Down               |  | Down               |
|  | Ch-                |  | CH- / Page-        |
|  | Vol+               |  | Vol+               |
|  | TXT Hold           |  | Fav / Marker / PC  |
|  | TXT Index          |  | Info / Angle       |
|  | TXT Size           |  | Zoom / Size        |





Originalfernbedienung Ersatzfernbedienung

|   |            |   |                             |
|---|------------|---|-----------------------------|
|  | Reveal     |  | AV / Input / RDS            |
|  | TXT Red    |  | Red / Netflix / Search      |
|  | TXT Green  |  | Green / APP / Repeat        |
|  | TXT Yellow |  | Yellow / YouTube / Repeat   |
|  | TXT Blue   |  | Blue / Prime Video / Random |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |
|   |            |   |                             |

Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

